

**FAG feeler gauges
FEELER-GAUGE-100 and
FEELER-GAUGE-300**

Feeler gauges are used to measure the radial internal clearance, especially for mounting on tapered

shaft seats and on adapter and extraction sleeves.

FAG feeler gauges FEELER-GAUGE-100 and FEELER-GAUGE-300

Ordering designation	Feeler length mm	Feeler thickness mm			
FEELER-GAUGE-100	100	0,03	0,08	0,14	
		0,04	0,09	0,16	
		0,05	0,10	0,18	
		0,06	0,12	0,20	
		0,07			
FEELER-GAUGE-300	300	0,03	0,12	0,20	
		0,04	0,13	0,25	
		0,05	0,14	0,30	
		0,06	0,15	0,35	
		0,07	0,16	0,40	
		0,08	0,17	0,45	
		0,09	0,18	0,50	
		0,10	0,19		



**FAG feeler gauges FEELER-GAUGE-100 and
FEELER-GAUGE-300**